



UPHOLSTERY

Fast Track Upholstery System

INTRODUCTION

The **Fast Track Upholstery System** is designed to allow the beginning technician to do excellent work and the accomplished technician to perform magic. Using **Avenge upholstery products**, the **Fast Track System** works on all fabrics except in a few "specialty situations".

PROCEDURE

Use the following process when cleaning upholstery:

- **STEP 1**
Determine the type of fabric to be cleaned. See the **Upholstery Fiber Identification Brochure**.
- **STEP 2**
Categorize the fabric as either natural or synthetic. Then, using the descriptions in the chart assign the upholstery to a category A-F.
- **STEP 3**
Vacuum the fabric with the **Rug Rat** and the crevice tool. This will help accomplish maximum dry soil removal, and prevent injury to the technician.
- **STEP 4**
Apply the appropriate prespray.
- **STEP 5**
Agitate with a **Horsehair Brush**.
- **STEP 6**
Extract with the correct rinse solution and **Hy-Dry tool**.
- **STEP 7**
Groom the fabric as needed. This applies to pile weaves such as velvets.
- **STEP 8**
Dry the fabric using ventilation and air movers.
- **STEP 9**
After drying, some velvets may require additional grooming.

Chemicals Needed



Avenge Fabric Prespray
Type: Prespray
Highlights: Preconditions fine fabrics on upholstery.



Avenge HD Fabric Prespray
Type: Prespray
Highlights: Uses a strong odorless ammonia-based formula to precondition heavily soiled synthetic fabrics.



Avenge Clean Rinse
Type: Emulsifier
Highlights: Rinses away soil and chemical residue.



Fab-Set
Type: Conditioner/neutralizer
Highlights: Prevents soil wicking, browning and yellowing, and will neutralize alkaline residue.



Dye-Loc
Type: Specialty Chemical
Highlights: Prevents color bleed.



Citrus Solv
Type: Spotter/Degreaser
Highlights: Easily cuts through body oils, gum, grease, tar, cosmetics and more.



Boost All
Type: Oxygen Bleach
Highlights: Increases soil suspension. Dissolves oils.

Accessories Needed




Horsehair Brush
Description: Brush
Purpose: Agitates chemicals on upholstery without damaging fabric.



2-Quart Pump Sprayer
Description: Pump sprayer
Purpose: Applies chemicals quickly and efficiently.



Rug Rat
Description: Vacuum
Purpose: Hand-held brush vacuum.

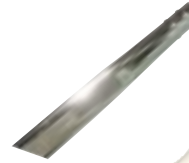

Crevice Tool
Description: Hand tool
Purpose: Reaches the places that your wand won't.



Dust Downer
Description: Vacuum Accessory
Purpose: Protects machines from dust while dry vacuuming.



HyDry™ Tool
Description: Hand tool
Purpose: Uses adjustable vacuum relief to optimize cleaning and internal jet to avoid over-wetting.



Brass Velvet Brush
Description: Brush
Purpose: Grooms and finishes fine velvet fabrics.



Air King
Description: Air Mover/Heater
Purpose: Moves and heats air powerfully and efficiently to dry upholstery.

Equipment Needed



Truckmount
Description: Hot water extraction machine.
Purpose: Unit provides necessary heat, pressure and vacuum to obtain desired results.



Olympus Portable

Description: Portable extractor

Purpose: Portable unit that extracts water and chemical from carpet or upholstery.



Air Movers

Description: High volume air mover

Purpose: Dries carpet and upholstery quickly.

HELPFUL HINTS—



1. If using an extractor for dry vacuuming, use a **Dust Downer** to prevent dry soil from being vacuumed into the motors, and being blown back into the environment. This will prevent damage to the motors and blowers.
2. Use sufficient prespray to accomplish soil suspension. Using too little prespray causes poor results and extra technician effort.

Avenge Upholstery Cleaning System

NATURAL

A. Use for: Refined cotton, wool, cotton velvet, silk (water cleanable), linen, cotton blends, rayon. This formula used approximately 85% of the time.

PRESPRAY: 1 part AVENGE FABRIC PRESPRAY to 1 part hot water

*Prespray may be used full strength for extra heavy soil

EXTRACT: AVENGE CLEAN RINSE

Portable: 1 oz. per gallon hot water

Truckmount: 1 qt. per 5 gallons water

B. Use for: Unrefined cotton, cotton canvas, exotics or any fabric subject to browning, wicking or water marking. This formula used approximately 10% of the time.

PRESPRAY: 1 part AVENGE FABRIC PRESPRAY, 1 part hot water

*Prespray may be used full strength for extra heavy soil

EXTRACT: FAB SET

Portable: 4 oz. per gallon hot water

Truckmount: 1 qt. per 5 gallons water (meter high)

C. Use for: Bleeders, natural or synthetic fibers. This formula used approximately 5% of the time.

PRESPRAY: 3 oz. Dye-Loc per gallon of warm water, dwell 1 minute.

Followed by prespraying:

1 part AVENGE FABRIC PRESPRAY to 1 part hot water

EXTRACT: 3 oz. Dye-Loc per gallon of warm water

SYNTHETIC

D. Use for: Medium to heavy soiled synthetics such as nylon, olefin and polyester. This formula used approximately 50% of the time.

PRESPRAY: 1 part HD FABRIC PRESPRAY, 1 part hot water

EXTRACT: AVENGE CLEAN RINSE

Portable: 1 oz. per gallon hot water

Truckmount: 1 qt. per 5 gallons water

E. Use for: Heavily soiled synthetics with heavy stains and body oils. This formula used approximately 30% of the time.

PRESPRAY: AVENGE HD FABRIC PRESPRAY (do not dilute)

2 oz. Citrus Solv per gallon of Avenge HD

EXTRACT: AVENGE CLEAN RINSE

Portable: 1 oz. per gallon hot water

Truckmount: 1 qt. per 5 gallons water

F. Use for: Exceptionally heavy soils, grease and stains on synthetics. This formula used approximately 20% of the time.

PRESPRAY: AVENGE HD FABRIC PRESPRAY (do not dilute)

1 oz. Boost All-Dissolve first in quart of hot water then add to Avenge HD

2 oz. Citrus-Solv per gallon of Avenge HD

EXTRACT: AVENGE CLEAN RINSE

Portable: 1 oz. per gallon hot water

Truckmount: 1 qt. per 5 gallons water

Quick Guide



PROCEDURE

- 1 Categorize the fabric.
- 2 Vacuum the upholstery.
- 3 Pre-spray the upholstery with one of the **Avenge Pre-Sprays**.
- 4 Agitate with a **Horsehair Brush**.
- 5 Extract with **Avenge Clean Rinse** and the **HyDry tool**.
- 6 Groom the fabric (velvets).
- 7 Dry the fabric using **Air Movers**.
- 8 Groom the fabric after drying if needed.

PRODUCTS NEEDED

- Avenge Fabric Pre-spray
- Avenge HD Fabric Pre-spray
- Avenge Clean Rinse
- Dye-Loc
- Horsehair Brush
- 2-qt Pump Sprayer
- Crevice Tool
- HyDry Tool
- Brass Velvet Brush
- Olympus Portable
- Truckmount
- Fab Set
- Citrus Solv
- Boost All
- Rug Rat
- Dust Downer
- Blue Blower
- Air Mover

Other Resources

Bridgepoint Catalog
 Bridgepoint Upholstery Manual
 IICRC S300 Standard and Reference Guide
 Bridgepoint Fast Track Manual
 Bridgepoint Website • www.bridgepoint.com
 Bridgepoint Customer Service • 1-800-794-7425